


Operation document for EdiGuard IDX 380


Contents

1. Names of parts
2. Setting Cards
3. Setting the Ink and Media
4. Operation
5. Cleaning
6. Removing the jamming card

1. Names of Parts

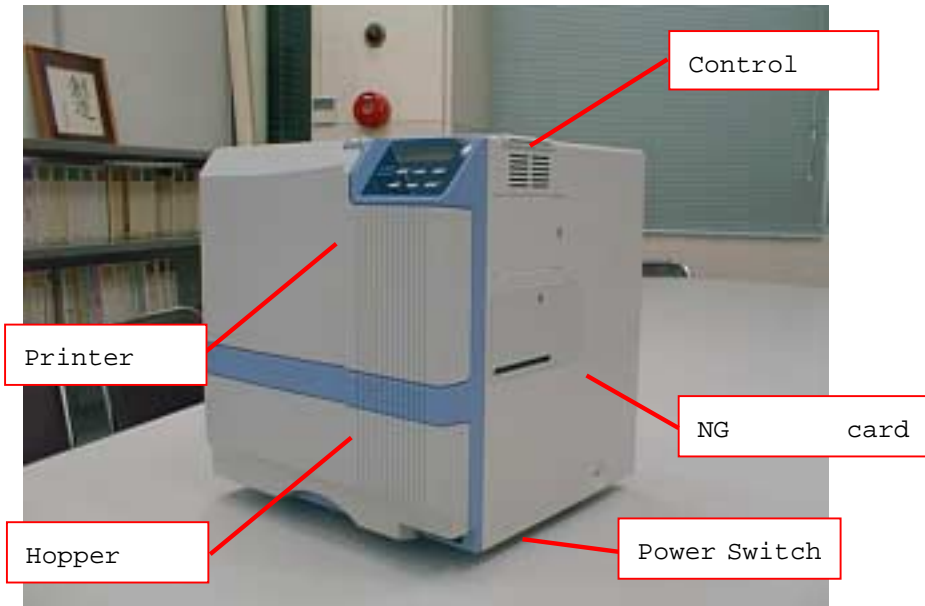

Photol-1

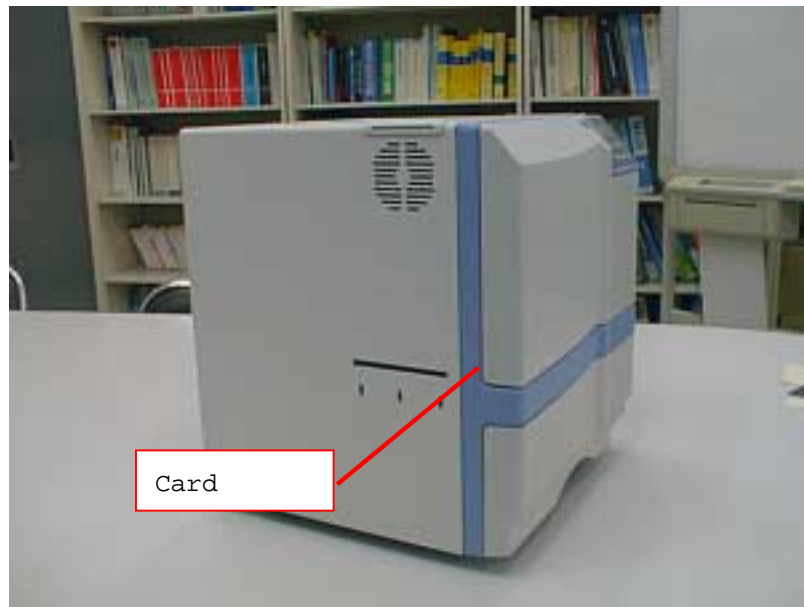

Photol-2

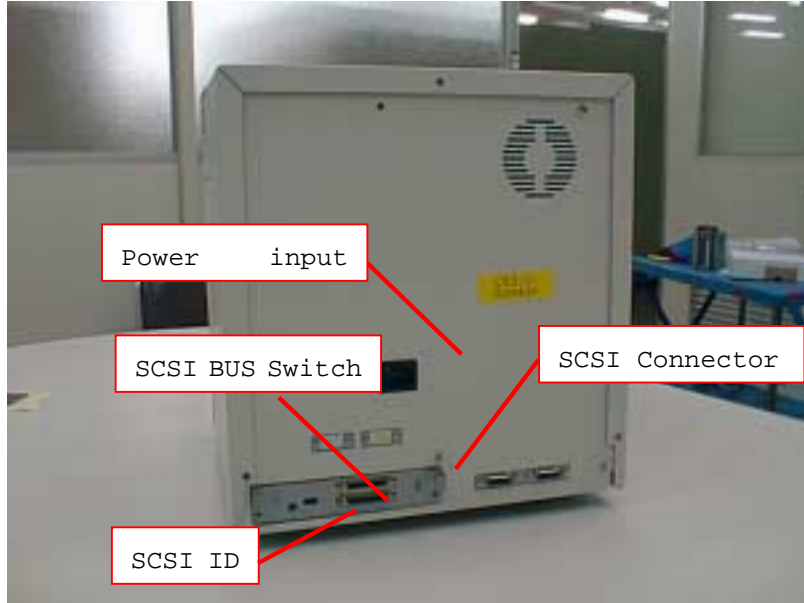


Photo1-3

2. Setting Cards



1) Open the Hopper Tray. Photo2-1



2) Move the card push plate. Photo2-2



3) Lock the card push plate. Photo2-3



4) Set the cards. Photo2-4



5) Lift up the card push plate, and hold the cards. Photo2-5



6) Close the Hopper Tray. Photo2-6

3. Setting the Ink and Media



1) Slide the door lock lever. Photo3-1



2) Push the ink cassette lock cancellation lever. Photo3-2




3) Pull out the ink cassette. Photo3-3




4) Push the media cassette lock cancellation lever. Photo3-4




5) Pull out the media cassette. Photo3-5

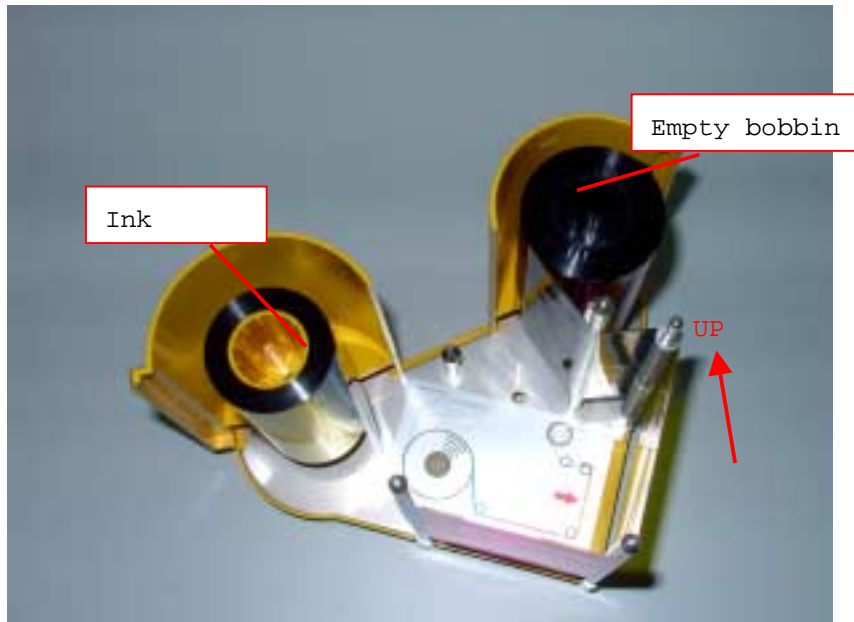

6) Refer to a photograph, and push the ink ribbon into the ink cassette.(Remove slack.) Photo3-6

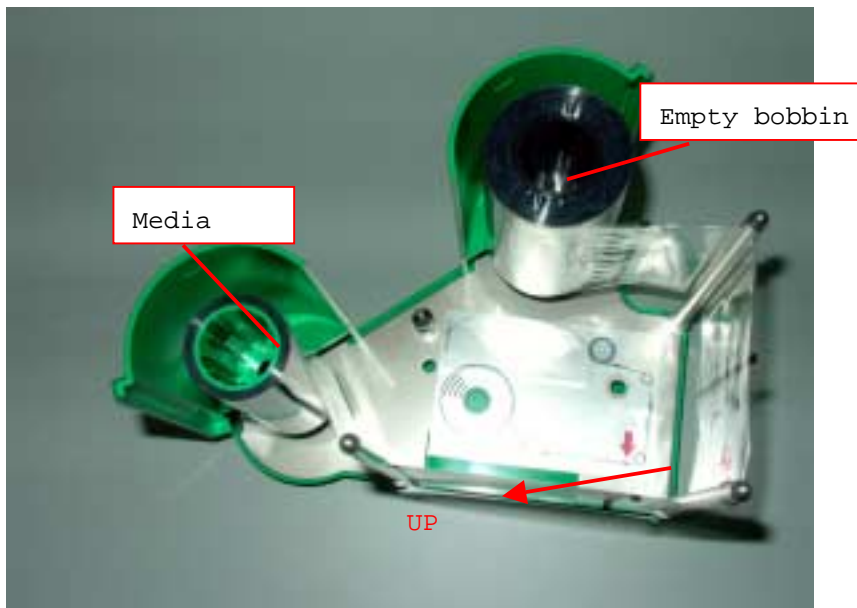

7) Refer to a photograph, and push the media film into the media cassette. (Remove slack.) Photo3-7

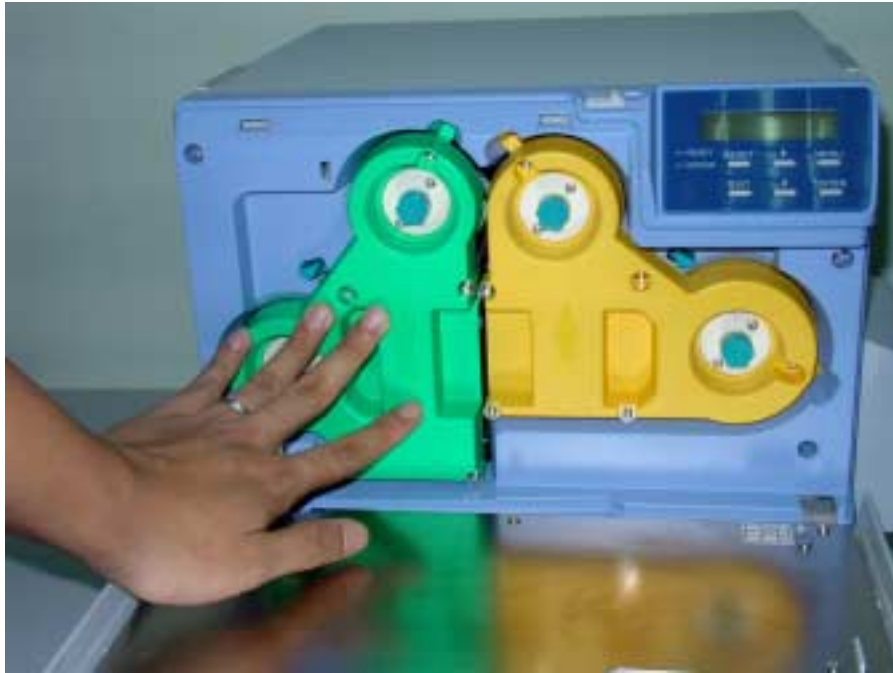

8) Push a cassette into an original form surely. Photo3-8



9) Close the printer door . Photo3-9

4. Operation

- 1) Turn the power switch on.
- 2) IDX 350 starts initialization.
- 3) After a Preheat for about 4 minutes, IDX 350 becomes a Ready state.

5. Cleaning (Cleaning the cleaning rollers)

- 1) Open the Hopper Tray.(Refer to Photo2-1)
- 2) Remove the cleaning unit.



Photo 5-1

- 3) Insert a cleaning card between rollers, and clean.



Photo 5-2

6. Removing the jamming card

6.1 Hopper JAM

- 1) Remove the Hopper Tray.

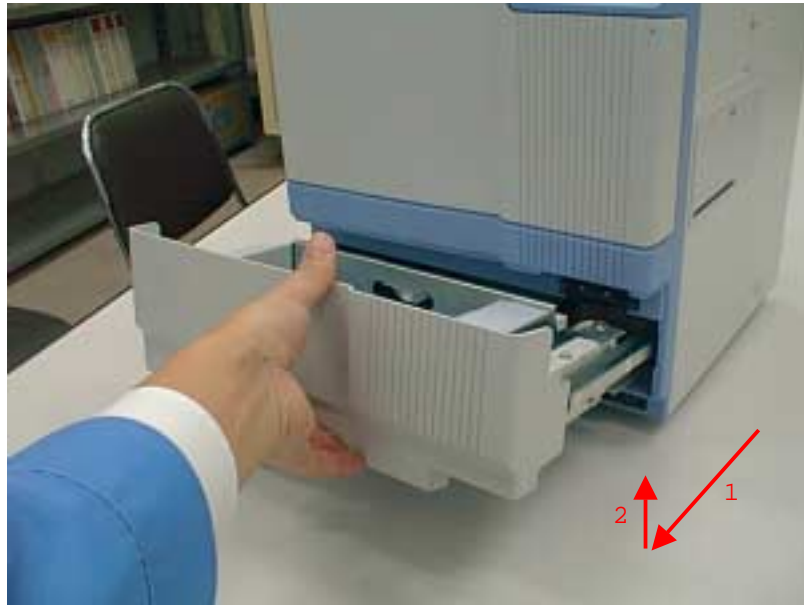


Photo6-1

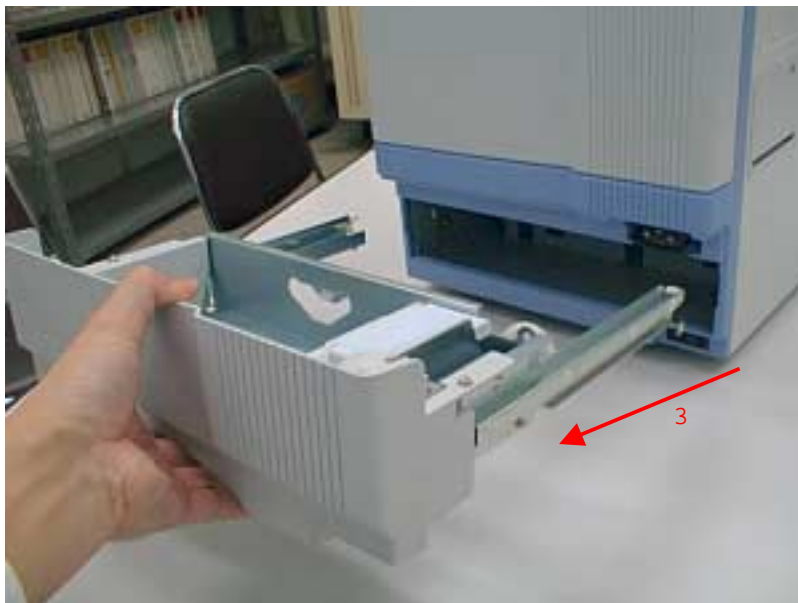


Photo6-2

2) Remove the jamming card.

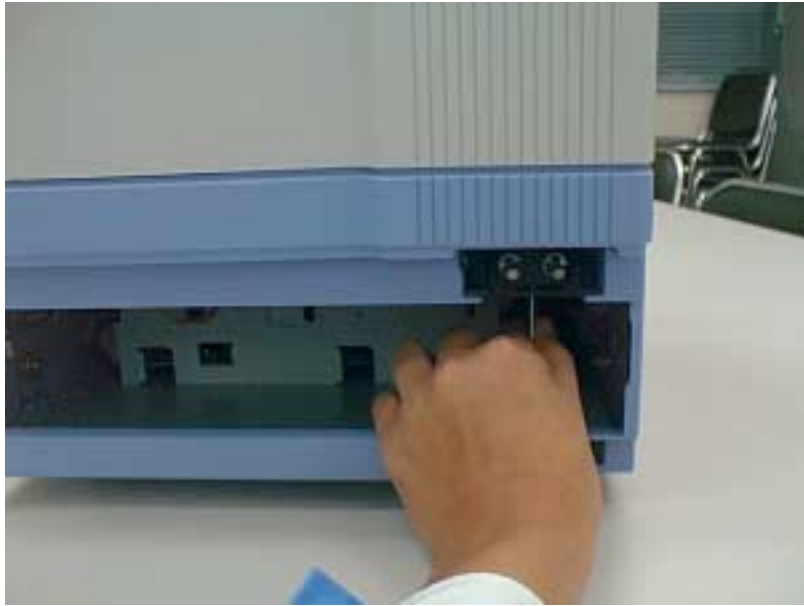


Photo6-3

6.2 Turn Over JAM

- 1) Open the printer door. (Refer to Photo3-1)
- 2) Pull out the ink cassette. (Refer to Photo3-2 and 3-3)
- 3) If it is necessary, turn the table slowly by hand.
- 4) Remove the jamming card.



Photo6-4

6.3 Retransfer JAM

- 1) Open the printer door. (Refer to Photo3-1)
- 2) Pull out the media cassette. (Refer to Photo3-4 and 3-4)
- 3) Rotate the Jog Dial to the left.



Photo6-5

- 4) If a card came to a position to look at, draw it.

Caution

Because internal metal part is a high temperature, please do not touch it.

